

Battery

The battery is located under the left rear fender.

Removal

1. Make sure the ignition switch is OFF (w).
2. Unlatch the retainer clips and remove the battery cover.

UNDER LEFT REAR FENDER

