


# Indicators & Displays

## Coolant temperature gauge

The coolant temperature gauge shows engine coolant temperature with the coolant temperature display. When the segment begins to move above the C (Cold) display, the engine is warm enough for the SXS to be ridden. The normal operating temperature range is within the section between the H and C displays.

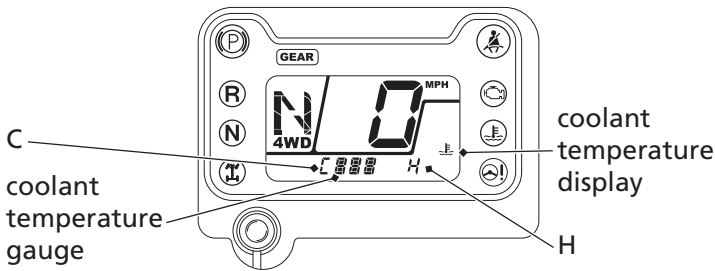

If all sections of the coolant temperature gauge, including segment H and high coolant/oil temperature indicator are on (automatically appears in the display), stop the engine and check the reserve tank coolant level.

Read pages 214 - 215 and do not drive the SXS until the problem has been corrected.

### NOTICE

*Continuing to ride with an overheated engine can cause serious engine damage.*

