

# Indicators & Displays

## Gear position display

### Gear position indicator

The gear position indicator shows the gear position when the ignition switch is in the ON (q) position.

The indicator displays: N for neutral, R for reverse, and D for the drive.

(SXS700M2D/M4D only)

When the shift paddles are operated, the indicator displays the number of gear position (1,2 or 3).

“–” will be displayed on the gear position indicator when the transmission is not shifted into gear properly. Before driving, check that the gear position is properly displayed on the gear position indicator.

If the gear position indicator shows “–” and blinks, turn the ignition switch to the OFF (w) position, and then turn it back to the ON (q) position again. If the gear position indicator still shows “–” and blinks, see your dealer.

### 4WD indicator

This indicator will be on when the 4WD or 4WD diff lock mode engages (page 38).

