

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).										
		Initial maintenance	Regular maintenance interval						Note	Refer to page
FREQUENCY (Whichever comes first)	x100 mi	1	6	12	18	24	30	36		
	x100 km	1.5	10	20	30	40	50	60		
		Hours	20	100	200	300	400	500	600	
ITEMS		Month	1	12						
	Lubricate all hinges, latches, and pivots				●			●		151
**	Inspect the following items:									—
	Suspension components									—
	Wheels									181
	Driveshaft boots									182
	Accelerator and brake pedals				●			●		156, 171
	Brake light switch									173
	Exhaust system									163
	Battery terminal condition									184
	Check parking brake adjustment	●						●		172
**	Inspect the following items:									—
	Tie-rod ends									—
*	Steering gearbox and boots							●		—
*	Brake hoses and lines									—
*	SXS underbody								4	—
*	Inspect evaporative emission control system (USA - 50 states [meets California])			Every 2 years (regardless of mileage)						—
	Replace the following items:			Every 2 years (regardless of mileage)						—
	Front and rear final gear oil									137, 140
*	Engine coolant									144
	Brake fluid									—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 246).

** In the interest of safety, we recommend these items be serviced only by your dealer.

Note 4 Check the underbody whenever the under guard has been hit.