


If a Fuse Blows

Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (w) before checking or replacing the fuses.
2. To access the main fuse, remove the front seat (page 122) and right side rubber dust cover.
3. Remove the fuse cover.
4. Pull the main fuse out. If it is blown, install the spare main fuse. Spare main fuse is located in the fuse box cover (page 218).

UNDER SEAT

fuse cover

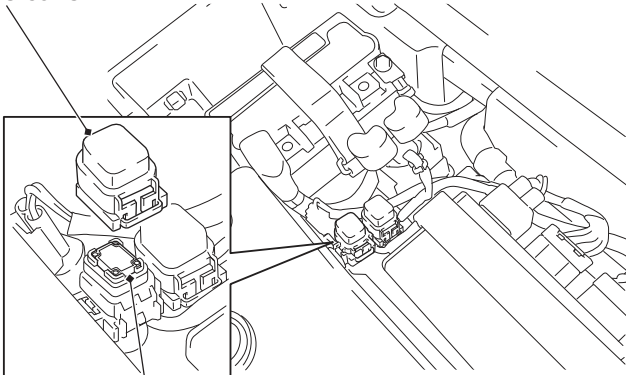

main fuse

(cont'd)