

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST ⇔	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
				mi	100	600	1200				
				km	150	1000	2000				
				MONTH	1	6	12				
		NOTE	HOURS	20	100	200					
	REAR FINAL GEAR CASE OIL					(R.EVERY 2 YEARS)			102		
*	BRAKE FLUID	NOTE 3							120		
*	BRAKE SHOE WEAR	NOTE 1							132		
*	BRAKE LIGHT SWITCH								133		
	BRAKE SYSTEM								120		
*	REVERSE LOCK SYSTEM GUARDS								113		
	CLUTCH SYSTEM								141		
*	SUSPENSION								112		
*	SPARK ARRESTER						C	C	—		
*	NUTS, BOLTS, FASTENERS								119		
**	WHEELS/TIRES								—		
**	TIE-ROD AND JOINT BOOTS								—		
**	STEERING SHAFT HOLDER BEARINGS								—		
**	STEERING SYSTEM								—		

* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 198).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.