If Your Engine Quits or Won't Start

| SYMPTOM: Starter motor doesn't operate. | |
|---|--------------------------------------|
| POSSIBLE CAUSE | WHAT TO DO |
| ignition switch OFF | Turn the ignition switch ON. |
| transmission not in | Shift into neutral. |
| neutral | |
| blown fuse | Replace with a new fuse of the |
| | same rating (page 174). |
| battery lead loose | Tighten the battery lead. |
| low (or dead) battery | Charge the battery (page 146). |
| | If charging doesn't help, see your |
| | Honda dealer. |
| faulty starter motor | If all possible causes are negative, |
| | the starter motor may be faulty. See |
| | your Honda dealer. |

| SYMPTOM: Starter motor works, but the engine won't | |
|--|---|
| start. | |
| POSSIBLE CAUSE | WHAT TO DO |
| engine stop switch OFF | Turn the engine stop switch to RUN. |
| out of fuel | Fill the fuel tank. |
| flooded engine | See <i>Flooded Engine</i> (page 54). |
| loose or | Install the spark plug cap securely. If |
| unconnected spark | the engine still won't start, see your |
| plug cap | Honda dealer. |
| loose battery cables | Tighten the battery terminal bolts. |
| weak battery | Charge the battery (page 146). If |
| | charging doesn't help, see your |
| | Honda dealer. |