

# If the Shift Switches Do Not Function

---

If one or both shift switches do not function, see the following instructions. If proper function cannot be restored, see your dealer.

## When the engine is running:

1. Stop the ATV.
2. Turn the ignition switch to the OFF (w) position.
3. After the engine stops, turn the ignition switch to the ON (q) position.
4. Press both shift switches and check that they are functioning.
5. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see *Emergency Gear Selection & Operation*, [page 168](#).

## When the engine is stopped and the ignition switch is ON:

1. Turn the ignition switch to the OFF (w) position.
2. Turn the ignition switch to the ON (q) position.
3. Press both shift switches and check that they are functioning.
4. If both switches are functioning, shift into neutral and restart the engine.

If one or both switches are not functioning, see *Emergency Gear Selection & Operation*, [page 168](#).

## When the battery is low (or dead):

- See *If the Battery Is Low (or Dead)*, [page 179](#).