


If a Fuse Blows

All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

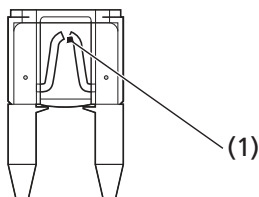

(1) blown fuse

The main fuse is located in the battery compartment. A spare fuse is located in the owner's manual storage area under the seat ([page 91](#)).

Recommended Fuses

| | |
|------------------|------|
| main fuse | 15 A |
| shift motor fuse | 30 A |