


Indicators

Gear Position Indicator

The gear position indicator (q) shows the gear position when the ignition switch is in the ON (q) position and the engine is running.

The indicator shows: 1 – 5 for the five forward speed gears.

CENTER OF HANDLEBAR

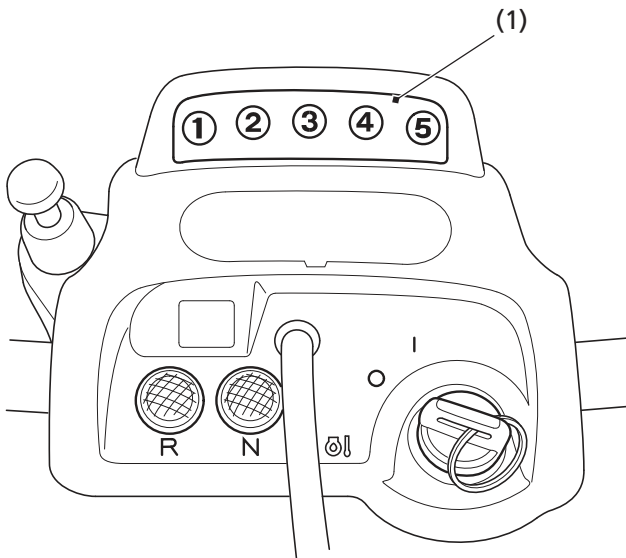

(1) gear position indicator