

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page	
			mi	100	600	1200			
			km	150	1000	2000			
			MONTH	1	6	12			
NOTE	HOURS	20	100	200					
*	FUEL LINE					I	—		
*	THROTTLE OPERATION					I	109		
*	CARBURETOR CHOKE					I	111		
	AIR CLEANER	NOTE 1				C	C	104	
*	SUB AIR CLEANER	NOTE 1				C	R	—	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	108	
	SPARK PLUG					I	I	115	
*	VALVE CLEARANCE					I	I	I	118
	ENGINE OIL					INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		96	
**	ENGINE OIL STRAINER SCREEN						C	—	
**	ENGINE OIL CENTRIFUGAL FILTER						C	—	
*	ENGINE IDLE SPEED					I	I	I	114
*	SECONDARY AIR SUPPLY SYSTEM						I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

** In the interest of safety, we recommend these items be serviced only by your dealer.