

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST  ⇒	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
	REAR FINAL GEAR CASE OIL			(R: EVERY 2 YEARS)	I	102	
*	BRAKE FLUID	NOTE 3			I	120	
*	BRAKE SHOE WEAR	NOTE 1			I	132	
*	BRAKE LIGHT SWITCH		I	I	I	133	
	BRAKE SYSTEM		I	I	I	120	
*	REVERSE INHIBITOR SYSTEM		I	I	I	113	
	GUARDS			I	I	141	
*	CLUTCH SYSTEM		I	I	I	112	
*	SUSPENSION			I	I	—	
*	SPARK ARRESTER			C	C	119	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	135	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.