

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | FREQUENCY                         | WHICHEVER<br>COMES FIRST<br><br>⇒ | INITIAL   |     |      | Refer to<br>page |      |
|-------|-----------------------------------|-----------------------------------|---|-----|------|------------------|------|
|       |                                   |                                   | MAINT. INTERVAL   |     |      |                  |      |
|       |                                   |                                   | mi  | 100 | 600  |                  | 1200 |
|       |                                   |                                   | km  | 150 | 1000 |                  | 2000 |
| MONTH | 1                                 | 6                                 | 12  |     |      |                  |      |
| NOTE  | HOURS                             | 20                                | 100   | 200 |      |                  |      |
| *     | FUEL LINE                         |                                   |   |     | I    | —                |      |
| *     | THROTTLE OPERATION                |                                   |   |     | I    | 109              |      |
| *     | CARBURETOR CHOKE                  |                                   |   |     | I    | 111              |      |
|       | AIR CLEANER                       | NOTE 1                            |   | C   | C    | 104              |      |
| *     | SUB AIR CLEANER                   | NOTE 1                            |   | C   | R    | —                |      |
|       | AIR CLEANER HOUSING<br>DRAIN TUBE | NOTE 2                            |   | I   | I    | 108              |      |
|       | SPARK PLUG                        |                                   |   | I   | I    | 115              |      |
| *     | VALVE CLEARANCE                   |                                   | I   | I   | I    | 118              |      |
|       | ENGINE OIL                        |                                   | INITIAL= 100 mi (150 km),<br>20 operating hours or 1<br>month: R<br>REGULAR= Every 600 mi<br>(1,000 km), 100 operating<br>hours or 12 months: R |     |      | 96               |      |
| **    | ENGINE OIL CENTRIFUGAL<br>FILTER  |                                   |   |     | C    | —                |      |
| *     | ENGINE IDLE SPEED                 |                                   | I   | I   | I    | 114              |      |
| *     | SECONDARY AIR SUPPLY<br>SYSTEM    |                                   |   |     | I    | —                |      |

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.