

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
		NOTE	HOURS	20	100	200	
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	102
*	BRAKE FLUID	NOTE 3				I	120
*	BRAKE SHOE WEAR	NOTE 1				I	132
*	BRAKE LIGHT SWITCH			I	I	I	133
	BRAKE SYSTEM			I	I	I	120
*	REVERSE INHIBITOR SYSTEM			I	I	I	113
	GUARDS				I	I	141
*	CLUTCH SYSTEM			I	I	I	112
*	SUSPENSION				I	I	—
*	SPARK ARRESTER				C	C	119
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	135
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 198).

** In the interest of safety, we recommend these items be serviced only by your dealer.