

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
NOTE	HOURS	20	100	200			
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)		96
*	BRAKE FLUID	NOTE 3					118
*	BRAKE SHOE WEAR	NOTE 1					124
*	BRAKE PAD WEAR	NOTE 1,2					121
*	BRAKELIGHT SWITCH						127
	BRAKE SYSTEM						118
*	REVERSE LOCK SYSTEM						110
	GUARDS						135
*	CLUTCH SYSTEM						106
*	SUSPENSION						—
*	SPARK ARRESTER				C	C	116
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						—
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARING						—
**	STEERING SYSTEM						—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 188).

** In the interest of safety, we recommend these items be serviced only by your dealer.