

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
		⇨	mi	100	600	1200		
			km	150	1000	2000		
		NOTE	MONTH	1	6	12		
		HOURS	20	100	200			
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	103	
*	CARBURETOR CHOKE					I	105	
	AIR CLEANER	NOTE 1				C	C	98
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	102
	SPARK PLUG					I	I	112
*	VALVE CLEARANCE			I	I	I		115
	ENGINE OIL			INITIAL = 100mi (150km), 20 operating hours or 1 month: R REGULAR = Every 600mi (1000 km), 100 operating hours or 12 months: R				90
**	ENGINE OIL STRAINER SCREEN						C	—
**	ENGINE OIL CENTRIFUGAL FILTER						C	—
*	ENGINE IDLE SPEED			I	I	I		111

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 190).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.