

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST ⇔	INITIAL		REGULAR		Refer to page
				MAINT.		MAINT. INTERVAL		
				mi	100	600	1200	
				km	150	1000	2000	
		MONTH	1	6	12			
		NOTE	HOURS	20	100	200		
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)			96
*	BRAKE FLUID	NOTE 3						118
*	BRAKE SHOE WEAR	NOTE 1						124
*	BRAKE PAD WEAR	NOTE 1,2						121
*	BRAKELIGHT SWITCH							127
	BRAKE SYSTEM							118
*	REVERSE LOCK SYSTEM							110
	GUARDS							135
*	CLUTCH SYSTEM							106
*	SUSPENSION							—
*	SPARK ARRESTER				C	C		116
*	NUTS, BOLTS, FASTENERS							—
**	WHEELS/TIRES							—
**	TIE-ROD AND JOINT BOOTS							—
**	STEERING SHAFT HOLDER BEARING							—
**	STEERING SYSTEM							—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 190).

** In the interest of safety, we recommend these items be serviced only by your dealer.