

Engine Oil

Changing Engine Oil


Refer to *Safety Precautions* on page 75 .

This procedure requires mechanical skill and professional tools such as a torque wrench, as well as a means for disposing of the drained fluid (page 156). If you do not have the skills or the tools, see your dealer.

Drain the Engine Oil:

1. With the ATV on the level ground, remove the oil fill cap/dipstick from the front crankcase cover.
2. Place an oil drain pan under the crankcase and remove the oil drain bolt (1).

UNDER ENGINE

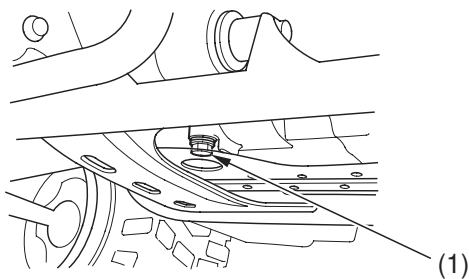

(1) oil drain bolt