

Starting & Stopping the Engine

Using the Recoil Starter (Canada only)

The recoil starter is used to start the engine when the battery is low. To operate the recoil starter:

1. Check that the transmission is in neutral.
2. Grasp the starter grip (1) firmly, then pull it out slowly approximately 4 in (100 mm).
3. Pull the grip up briskly and fully.
4. If the starter grip does not return smoothly (because of dirt in the assembly), see your dealer. After the engine starts, allow the starter grip to return slowly.

RIGHT SIDE

