

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | FREQUENCY   | WHICHEVER COMES FIRST<br>⇒ | INITIAL MAINT. |     |  | REGULAR MAINT. INTERVAL |   |     | Refer to page |  |
|-------|---|----------------------------|----------------|-----|--|-------------------------|---|-----|---------------|--|
|       |   |                            | mi             | 100 | 600  | 1200                    |   |     |               |  |
|       |   |                            | km             | 150 | 1000   | 2000                    |   |     |               |  |
|       |   |                            | MONTH          | 1   | 6  | 12                      |   |     |               |  |
|       | NOTE  | HOURS                      | 20             | 100 | 200  |                         |   |     |               |  |
| *     | FUEL LINE   |                            |                |     |  | I                       |   | —   |               |  |
| *     | THROTTLE OPERATION                                      |                            |                |     |  | I                       |   | 154 |               |  |
|       | AIR CLEANER   | (NOTE 1)                   |                |     | C  | C                       |   | 148 |               |  |
|       | AIR CLEANER HOUSING<br>DRAIN TUBE                       | (NOTE 2)                   |                |     | I  | I                       |   | 153 |               |  |
|       | SPARK PLUG  |                            |                |     | I  | I                       |   | 156 |               |  |
| *     | VALVE CLEARANCE   |                            |                |     | I  | I                       | I | 159 |               |  |
|       | ENGINE OIL  |                            |                |     | INITIAL=<br>100 mi (150km), 20<br>operating hours or 1<br>month: R             |                         |   | 128 |               |  |
|       | ENGINE OIL FILTER                                       |                            |                |     | REGULAR=<br>Every 600 mi (1,000 km),<br>100 operating hours or 12<br>months: R |                         |   | 133 |               |  |
| *     | ENGINE IDLE SPEED                                       |                            |                |     | I  | I                       | I | —   |               |  |
| *     | EVAPORATIVE EMISSION<br>CONTROL SYSTEM<br>(For AC type) | (NOTE 4)                   |                |     | I: EVERY 2 YEARS   |                         |   |     |               |  |
|       | RADIATOR COOLANT  | (NOTE 3)                   |                |     |  | I                       | I | 141 |               |  |
| *     | COOLING SYSTEM  | (NOTE 2)                   |                |     |  | I                       | I | —   |               |  |

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 248).