


If a Fuse Blows

All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

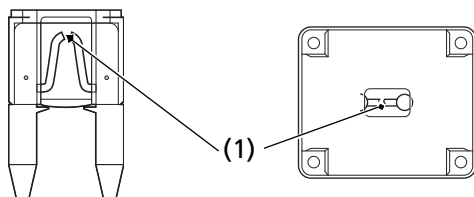

(1) blown fuse

The main fuse and the circuit fuses are located under the rear fender cover.

TRX420FA6 only:

The PS (Electric Power Steering) block fuse is located under the rear fender cover.

Recommended Fuses

| | |
|---|----------------|
| main fuse 1 | 30 A |
| main fuse 2 | 10 A |
| shift motor fuse | 30 A |
| other fuses | 20 A × 2, 10 A |
| PS (Electric Power Steering) fuse (TRX420FA6 only) | 40 A |