Is Your ATV Ready to Ride?

Cable Check the cable housings for wear. Check

the fittings for looseness. Replace or tighten

as needed.

Lights Make sure the headlight, brake light and tail

light are working properly.

If you are carrying cargo, also check the following:

Loading Limits Make sure you do not exceed the load

limits (page 60).

Cargo Check that all cargo is secure.

Check these items after you get on the ATV:

Throttle Check the freeplay and adjust if needed.

Press the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all

steering positions (page 152).

Brakes Squeeze the front brake lever and rear

brake lever/parking brake lever and step on the rear brake pedal to check that the controls operate normally. Depress the rear brake pedal several times, then check for proper rear brake lever/parking brake lever freeplay (pages 169). Make sure there is no

brake fluid leakage.

Reverse Assist Lever Check the freeplay and adjust if needed

(page 154). Make sure the lever operates

smoothly without sticking.

(cont'd)