

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
NOTE	HOURS	20	100	200				
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	152	
	AIR CLEANER	NOTE 1				C C	146	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I I	151	
	SPARK PLUG					I I I	155	
*	VALVE CLEARANCE					I I I	158	
	ENGINE OIL					INITIAL= 100 mi (150km), 20 operating hours or 1 month: R	126	
	ENGINE OIL FILTER					REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R	131	
	RADIATOR COOLANT	NOTE 3				I I I	139	
*	COOLING SYSTEM	NOTE 2				I I I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 246).