

If a Fuse Blows


EPS (Electric Power Steering) Fuse Access (TRX420FA6 only)

1. Turn the ignition switch to OFF (O) before checking the fuse.
2. Remove the seat (page 118).
3. Remove the rear fender cover (page 121).
4. To access the EPS block fuse (1), remove the EPS fuse block cover (2).

If the EPS block fuse is blown, see your dealer for this service.

5. Install the EPS fuse box cover.
6. Install the rear fender cover.
7. Install the seat.

UNDER REAR FENDER COVER

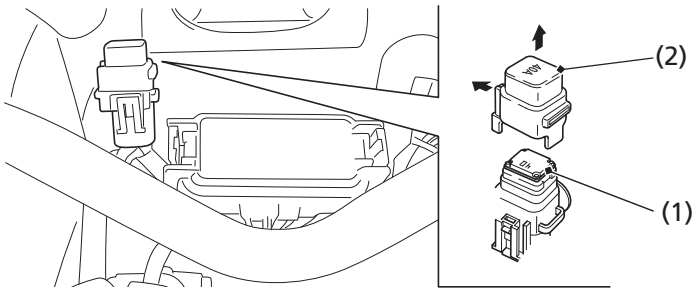

(1) EPS fuse

(2) EPS fuse block cover