

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
NOTE	HOURS	20	100	200				
	DRIVETRAIN BOOTS				I	I	179	
	FRONT and REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)	I	129, 132	
	REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)	I	129	
*	2WD/4WD SELECT SYSTEM					I	—	
*	BRAKE FLUID	NOTE 3			I	I	159	
*	BRAKE SHOES WEAR	NOTE 1, 2				I	167	
*	BRAKE PADS WEAR	NOTE 1, 2				I	162	
*	BRAKE LIGHT SWITCH			I	I	I	168	
	BRAKE SYSTEM			I	I	I	159	
*	REVERSE LOCK SYSTEM GUARDS			I	I	I	150, 177	
*	CLUTCH SYSTEM			I	I	I	149	
*	SUSPENSION				I	I	156	
*	SPARK ARRESTER				C	C	155	
*	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I	I	I	170	
**	TIE-ROD AND JOINT BOOTS			I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS					I	—	
**	STEERING SYSTEM					I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.