


# Tank Cover Assembly Removal

---

Refer to *Safety Precautions* on page 101.

The tank cover assembly must be removed for the engine oil filter, spark plug and clutch maintenance.

## RIGHT SIDE

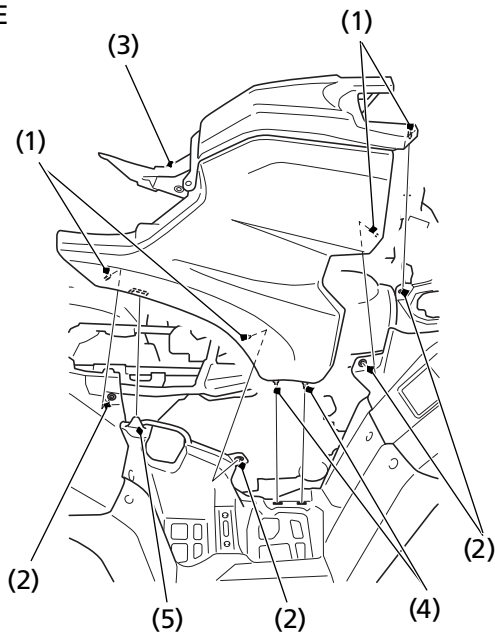

(1) prongs

(4) tabs A

(2) grommets

(5) tabs B

(3) tank cover assembly

## Removal

1. Remove the seat (page 112).
2. Remove the prongs (1) from the grommets (2).
3. Remove the tank cover assembly (3) by releasing the tabs A (4) and tabs B (5).