


If a Fuse Blows

Circuit Fuses Access

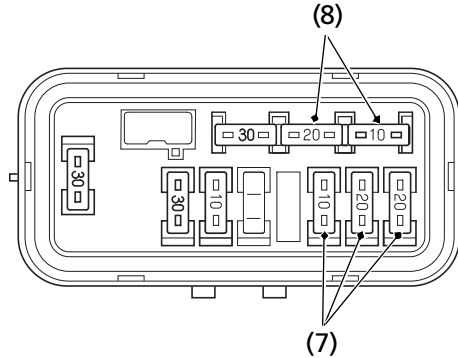

(7) circuit fuses

(8) spare fuses

6. To check or replace a circuit fuse (7), pull the old fuse out of its retaining clips.
If the fuse is blown, replace it with a spare fuse (8) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

- 7. Install the fuse box cover.
- 8. Install the rear fender cover.
- 9. Install the seat.