

# Indicators & Displays




---

Reset the meters after each scheduled maintenance.

To reset the maintenance tripmeter and the maintenance hourmeter, press and hold the mode button and turn the ignition switch to ON ( I ). Continue to hold the mode button, the maintenance minder indicator will light up, and after 2 seconds will flash twice, the maintenance minder indicator is reset.

Also the maintenance tripmeter and maintenance hourmeter will reset.

Maintenance Minder Indicators:

	<b>Initial Maintenance</b> Appears at 100 miles (150 km) or 20 operating hours, whichever comes first.
	<b>Regular Maintenance Interval 1</b> Appears 600 miles (1,000 km) or 100 operating hours after the Initial Maintenance or Regular Maintenance Interval 2 is performed and maintenance minder is reset, whichever comes first in the maintenance schedule.
	<b>Regular Maintenance Interval 2</b> Appears 600 miles (1,000 km) or 100 operating hours after Regular Maintenance Interval 1 is performed and maintenance minder is reset, whichever comes first in the maintenance schedule.

If the maintenance is done before the setting interval, be sure to reset the meters after the maintenance.