

If Your Engine Quits or Won't Start

| SYMPTOM: Engine starts, but runs poorly. | |
|--|--|
| POSSIBLE CAUSE | WHAT TO DO |
| high coolant temperature | Check the coolant temperature gauge and high coolant temperature indicator. Refer to <i>If the High Coolant Temperature Indicator Lights</i> , page 214. |
| runs erratically, misfires | See your dealer. |
| blubbers (rich fuel mixture) | See your dealer. |
| sooty exhaust (rich fuel mixture) | See your dealer. |
| detonates or pings under load | If applicable, switch to the recommended octane gasoline (page 117) or change your brand of gasoline. If the problem persists, see your dealer. |
| afterfires (backfires) | See your dealer. |
| pre-ignition (runs on after ignition switched OFF) | See your dealer. |

| SYMPTOM: Engine starts, but runs poorly or dies when hot. | |
|--|---|
| POSSIBLE CAUSE | WHAT TO DO |
| poor or inadequate fuel flow due to clogged fuel filter | See your dealer. (ensure clean fuel supply) |