Indicators & Displays

When the fuel gauge show $E _ _ _ F$ (4) and LO FUEL (5) blink 3 times alternately and fuel mark blinks, you should refill the tank as soon as possible.

The amount of fuel reserve is approximately:

1.29 US gal (4.9 ℓ)

Fuel gauge failure:

(4) E F

If the fuel gauge function fails E - - - - F (6) will blink.

See your dealer.

(The fuel mark disappears except the fuel gauge display)

(6) E - - - - F