

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
	NOTE	HOURS	20	100	200		
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	147
	AIR CLEANER	NOTE 1				C C	141
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I I	146
	SPARK PLUG					I I	151
*	VALVE CLEARANCE			I	I	I	154
	ENGINE OIL			INITIAL= 100 mi (150km), 20 operating hours or 1 month: R			120
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			125
*	ENGINE IDLE SPEED			I	I	I	—
	RADIATOR COOLANT	NOTE 3				I I	134
*	COOLING SYSTEM	NOTE 2				I I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).