

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨	INITIAL		REGULAR		Refer to page
			MAINT.	MAINT. INTERVAL	MAINT.	INTERVAL	
			mi	600	600	1200	
			km	150	1000	2000	
	MONTH	1	6	12			
	NOTE	HOURS	20	100	200		
*	FUEL LINE					I	—
*	THROTTLE OPERATION					I	131
	AIR CLEANER	NOTE 1				C C	125
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I I	130
	SPARK PLUG					I I	135
*	VALVE CLEARANCE			I	I	I	138
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			105
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			110
*	ENGINE IDLE SPEED			I	I	I	—
	RADIATOR COOLANT	NOTE 3				I I	119
*	COOLING SYSTEM	NOTE 2				I I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 226).