

Indicators & Displays

1	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check.</i>
2	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check.</i>
3	PGM-FI indicator	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned on. If the indicator comes on at any other time, reduce speed and take your vehicle to your dealer as soon as possible. <i>Lamp Check.</i>
4	High coolant temperature indicator	Lights when coolant temperature is high enough to adversely affect the service life of the engine. If the high coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 213 . <i>Lamp Check.</i>
5	PS (Electric Power Steering) indicator (TRX420FM2 only)	Lights when there is an abnormality in the PS (Electric Power Steering) system. See page 47 . <i>Lamp Check.</i>
6	fuel warning indicator (TRX420TM1 only)	Lights when there is only reserve fuel left in the fuel tank. The amount of fuel remaining approximately: 1.29 US gal (4.9 ℓ) You should refill the tank as soon as possible. See page 120 .