


Indicators & Displays

Speed and Mileage Unit Changing (Except TRX420TM1)

The speedometer, odometer, tripmeter and maintenance tripmeter show in either “MPH” and “MILE” or “KM/H” and “KM”.


To change the speed and mileage unit, press and hold the mode button (1) for more than 5 seconds in odometer ([page 28](#)) with the ATV stopped.

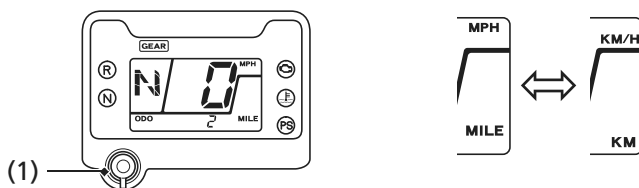

(1) mode button

4WD Indicator (Except TRX420TM1)

The 4WD indicator (1) appears when the 4WD mode engages ([page 35](#)).

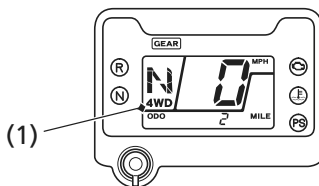

(1) 4WD indicator