


Indicators & Displays

Digital Clock (Except TRX420TM1)

The digital clock (1) displays hours and minutes with the clock mark (2), when the ignition switch is ON (1).

To adjust the time, proceed as follows:

1. Turn the ignition switch ON (1) to display the clock ([page 21](#)).
2. Press and hold the mode button (3) until the display start blinking.
3. To advance the display 1 minute at a time, press and release the mode button for 0.5 seconds.
Press and hold the mode button for more 0.5 seconds the display will begin advancing fast.
4. Release the mode button when the display reaches the desired time.
5. To set the clock, press and release the mode button for less than 0.5 seconds.
The clock can be set by turning the ignition switch off and then on.

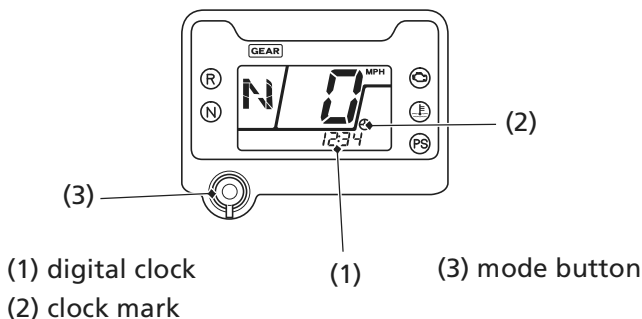

After the battery is reconnected ([page 185](#)), check the clock. Readjust the clock if necessary.