

# Engine Oil & Filter

---

6. Reinstall the oil filter cover, making sure the bolts are tightened to the specified torque:  
**9 lbf·ft (12 N·m , 1.2 kgf·m)**
7. Pour the drained oil into a suitable container and dispose of it in an approved manner ([page 202](#)).

## NOTICE

*Improper disposal of drained fluids is harmful to the environment.*

### *Add Engine Oil:*

1. Reinstall the oil drain bolt with the new sealing washer and tighten it to the specified torque:  
**18 lbf·ft (25 N·m , 2.5 kgf·m)**
2. Fill the crankcase with the recommended grade oil approximately:  
**2.9 US qt (2.7 ℓ)**
3. Reinstall the oil fill cap/dipstick.
4. Start the engine and let it idle for 3 – 5 minutes.
5. Stop the engine, wait 2 – 3 minutes and check the oil level. Make sure the oil is between the upper and lower level marks on the oil fill cap/dipstick. If necessary, add more oil but do not overfill.
6. Check that there are no oil leaks.
7. Install the tank cover assembly.
8. Install the seat.
9. Install the oil check lid.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.