

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
		km	150	1000	2000		
		MONTH	1	6	12		
		NOTE	HOURS	20	100	200	
	DRIVETRAIN BOOTS				I	I	179
	FRONT and REAR FINAL GEAR OIL (Except TRX420TM1)				(R: EVERY 2 YEARS)	I	129, 132
	REAR FINAL GEAR OIL (TRX420TM1 only)				(R: EVERY 2 YEARS)	I	129
*	2WD/4WD SELECT SYSTEM (Except TRX420TM1)					I	—
*	BRAKE FLUID	NOTE 3			I	I	159
*	BRAKE SHOES WEAR	NOTE 1, 2				I	167
*	BRAKE PADS WEAR	NOTE 1, 2				I	162
*	BRAKE LIGHT SWITCH			I	I	I	168
	BRAKE SYSTEM			I	I	I	159
*	REVERSE LOCK SYSTEM			I	I	I	150
	GUARDS				I	I	177
*	CLUTCH SYSTEM			I	I	I	149
*	SUSPENSION				I	I	156
*	SPARK ARRESTER				C	C	155
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	170
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS					I	—
**	STEERING SYSTEM					I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 238).

** In the interest of safety, we recommend these items be serviced only by your dealer.