
## **Clip Removal**

## Removal

1. Pull up the center pin to release the lock.

2. Pull out the clip of the hole.

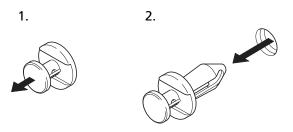

## Installation

- 1. Insert the clip into the hole.
- 2. Press down the center pin securely to lock the clip.

