

# Fuel

## Fuel Capacity

Fuel tank capacity, including reserve:

**3.88 US gal (14.7 ℓ)**

Reserve capacity:

**1.29 US gal (4.9 ℓ)**

TRX420FM1:


When there is only one segment left in the fuel gauge (page 25), fuel will be low and you should refuel as soon as possible.

TRX420TM1:

The tank should be refilled as soon as possible when the fuel warning indicator comes on.

## Refueling Procedure

Refer to *Safety Precautions* on page 101.

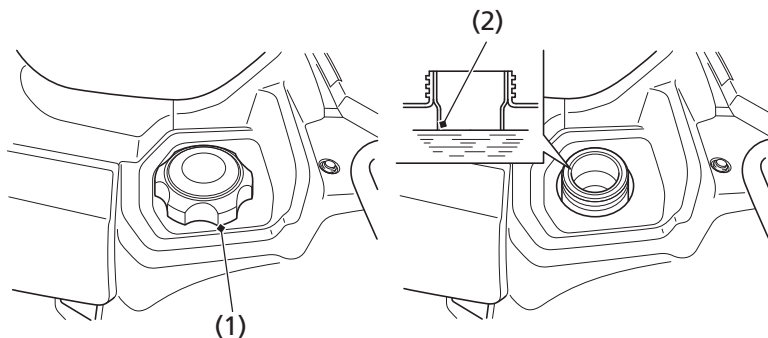

(1) fuel fill cap

(2) bottom of the filler neck