


Operation Component Locations

rear cargo rack

front cargo rack

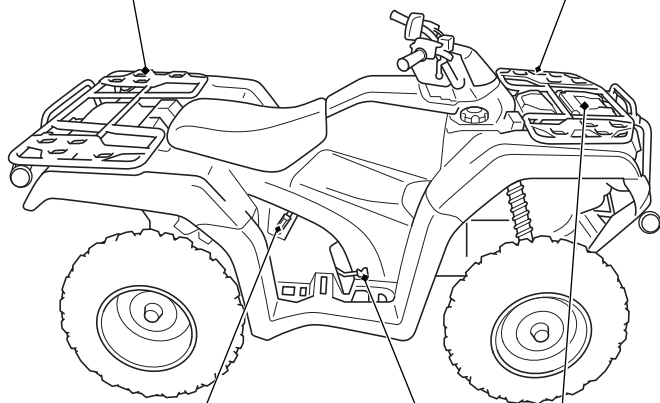

recoil starter
(Canada only)

rear brake pedal

front utility box