

# Instruments & Controls

---

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations .....	10
Indicators & Displays.....	13
Multi-function Display (TRX420FPM only).....	18
Gear Position Indicator (TRX420FPM only) .....	19
Oil Change Indicator (TRX420FPM only).....	20
Odometer (TRX420FPM only).....	21
Tripmeter (TRX420FPM only).....	21
Hourmeter (TRX420FPM only) .....	22
Fuel Gauge .....	23
Controls & Features .....	24
Fuel Valve.....	24
Ignition Switch.....	25
2WD/4WD Select Lever (Except TRX420TM) .....	26
Start Button .....	27
Engine Stop Switch.....	27
Headlight Switch.....	28
Headlight Dimmer Switch.....	28
Throttle Lever .....	29
Reverse Selector Knob.....	30
Front Brake Lever .....	31
Rear Brake Lever/Parking Brake Lever.....	31
Rear Brake Pedal.....	31
Parking Brake.....	32
Flag Pole Bracket .....	33
Trailer Hitch.....	34
PS (Electric Power Steering) (TRX420FPM only).....	35