

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇨	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			MONTH	1	6	12	
		NOTE	HOURS	20	100	200	
	DRIVETRAIN BOOTS						163
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL (Except TRX420TM)				(R: EVERY 2 YEARS)		114, 117
	REAR FINAL GEAR CASE OIL (TRX420TM only)				(R: EVERY 2 YEARS)		114
*	2WD/4WD SELECT SYSTEM (Except TRX420TM)						—
*	BRAKE FLUID	NOTE 3					143
*	BRAKE SHOES WEAR	NOTE 1,2					151
*	BRAKE PADS WEAR	NOTE 1,2					146
*	BRAKE LIGHT SWITCH						152
	BRAKE SYSTEM						143
*	REVERSE LOCK SYSTEM GUARDS						134 161
*	CLUTCH SYSTEM						133
*	SUSPENSION						140
*	SPARK ARRESTER				C	C	139
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						154
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 224).

** In the interest of safety, we recommend these items be serviced only by your dealer.