

# Starting & Stopping the Engine

---

## How to Stop the Engine

### Normal Engine Stop

To stop the engine, make sure the transmission is in neutral by checking that the neutral indicator light is on, then turn the ignition switch OFF ( O ).

If your ATV is stopped with the engine stop switch OFF ( ⌘ ) and the ignition switch ON ( I ), the battery will discharge.

The engine stop switch should normally remain in the RUN ( O ) position even when the engine is OFF.

### Emergency Engine Stop

To stop the engine in an emergency, use the engine stop switch. To operate, slide the switch to the OFF ( ⌘ ) position.