

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
		MONTH	1	6	12		
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS						193
	FRONT/REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)		146, 149
*	RANGE SELECT SYSTEM						—
*	BRAKE FLUID	NOTE 3					176
*	BRAKE PADS WEAR	NOTE 1, 2					180
*	BRAKE LIGHT SWITCH						184
	BRAKE SYSTEM						176
*	REVERSE INHIBITOR SYSTEM						167
	GUARDS						192
*	SUSPENSION						173
*	SPARK ARRESTER				C	C	172
*	NUTS, BOLTS, FASTENERS						—
**	WHEELS/TIRES						185
**	TIE-ROD AND JOINT BOOTS						—
**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—

- * Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 258](#)).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.