

Emergency Gear Selection & Operation

If the shift switches do not operate, use the following procedure to manually select a gear so you may drive the vehicle to a location where it can be loaded and transported to your dealer.

1. Turn the ignition switch to the ON (I) position.
2. Remove the seat ([page 130](#)) and tank cover assembly ([page 132](#)).
3. Remove the gear change tool from the storage compartment ([page 128](#)).
4. Check the neutral indicator.
If the transmission is in neutral, go to step 5.
If the transmission is not in neutral, use the gear change tool to shift to neutral so you will be able to start the engine. Refer to *How to Shift Gears Manually*: ([page 225](#)).
5. Apply the parking brake ([page 50](#)).
6. Press the start/over ride button to start the engine.
7. Set 2nd gear position. Refer to *How to Shift Gears Manually*: ([page 225](#)).
8. Return the gear change tool to the storage location.
9. Install the tank cover assembly and seat.
10. Get on the ATV, release the parking brake, and drive it at a safe speed to a place where it can be repaired or serviced.