


Indicators & Displays

LOW Indicator

The LOW indicator (1) will be displayed when low (L) range is engaged with the ignition switch in the ON (q) position (page 95).

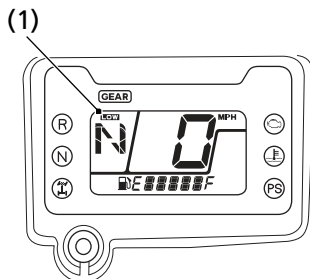

(1) LOW indicator