


# Indicators & Displays

## Speed and Mileage Unit Changing

The speedometer, odometer, tripmeter and maintenance tripmeter show in either “MPH” and “MILE” or “KM/H” and “KM”.


To change the speed and mileage units, press and hold the mode select button (1) for more than 5 seconds in odometer mode (page 28) with the ATV stopped.

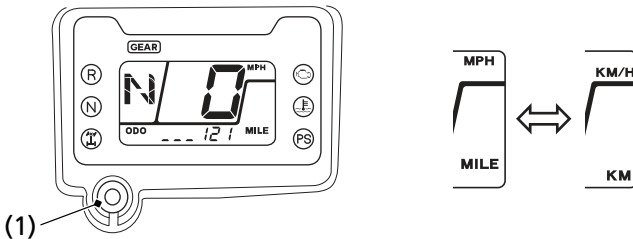

(1) mode select button

## 4WD Indicator

The 4WD indicator (1) shows when the 4WD mode engages (page 37).

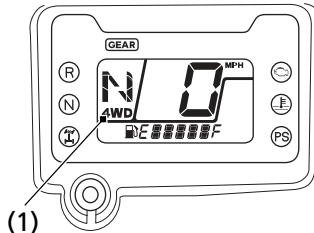

(1) 4WD indicator