

Indicators & Displays

1	RESET button (TRX500FA)	Resets the tripmeter to zero (0) (page 26). This button also used to reset the oil change indicator (page 24).
2	Odometer/tripmeter select button (TRX500FA)	Selects display of the odometer or tripmeter A or tripmeter B (page 26). This button also used to reset the oil change indicator (page 24).
	Odometer/tripmeter select button (TRX500FPA)	Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 27). This button also used to reset the oil change indicator (page 24).
3	4WD indicator	Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your Honda dealer as soon as possible. <i>Lamp Check.</i>
4	High oil/coolant temperature indicator	Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine. If the high oil/coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 242. <i>Lamp Check.</i>
5	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check.</i>
6	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check.</i>