

Indicators & Displays


Drive Mode Indicator

The drive mode indicator (1) shows the selected drive mode when the ignition switch is in the ON (I) position.


The indicator shows: LOW and ESP (page 110).

LOW indicator will be displayed when the shift lever is in low (L) in the ESP mode.

TRX500FA

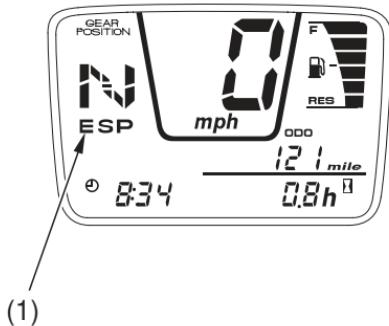

TRX500FPA

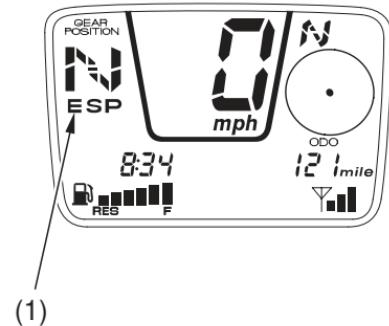

(1) drive mode indicator