


Controls & Features

Ignition Switch

The ignition switch (1) is used for starting and stopping the engine (page104). Insert the key and turn it to the right for the ON (|) position.

| Key Position | Function |
|--------------|----------------------------------|
| ON () | Electrical circuits on. |
| OFF (○) | No electrical circuits function. |

CENTER OF HANDLEBAR

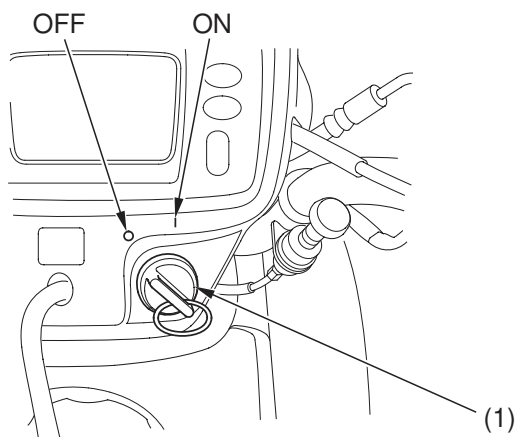

(1) ignition switch

| ON
○ OFF